

Studs

Mounting weld studs are commonly located on the back of the heater near each corner. As a heater's length exceeds 36", stud(s) are added in its center. This is Solar Products preferred mounting option. The mounting studs size options are as follows:

Width	Length			
1/4" x 20"	1/2"	3/4"	1"	1-1/4"
8mm			25mm	

Nuts

Mounting nuts are commonly located on the back of the heater near each corner. As a heater's length exceeds 36", nut(s) are added in its center. The mounting nut size options are as follows:

Description	Available Nut Sizes		
Snap-in Nut	1/4" x 20"	5/16" x 18"	3/8" x 16"
Compression Nut	1/4" x 20"	5/16" x 18"	3/8" x 16"

End Pieces

One last mounting option is to use special metal clips or brackets on the ends of the heater in lieu of the studs or nuts. This approach can simplify the heater installation for certain applications.



Mounting Stud



Snap-in Nut



Compression Nut



Extended End Piece



Channel End Piece