



INSTALLATION

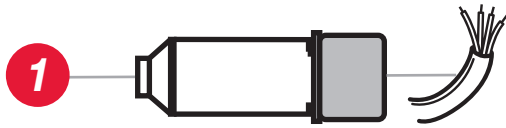

1 MOUNT AND WIRE HEATER



2 WIRE HEATER TO CONTROL (G, H1, H2, H3) and (S1, S2)

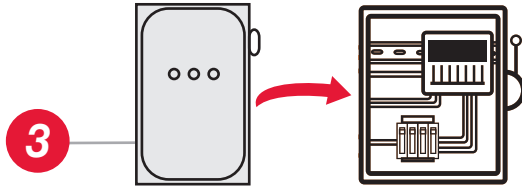

3 WIRE CONTROL TO MAIN POWER (L1, L2, L3, GND)

For detailed instructions use the QR code below to download the product manual



PROPER TORQUE VALVES FOR FITTINGS

WARNING: Avoid Damage to Housing


3/8" NPT (Sensor): 4 ft-lb

3/4" NPT (Power): 25 ft-lb


1-1/4" NPT (Air): 7 ft-lb

(Excessive force will crack housing and void warranty)


START-UP

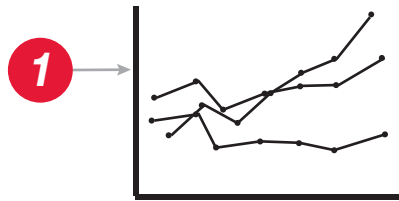


1 REFERENCE PERFORMANCE CURVES

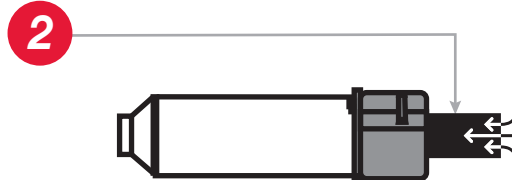

2 CONNECT AIR SOURCE TO HEATER

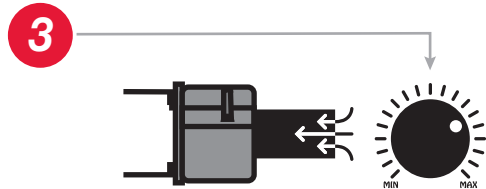


3 TURN ON AIR

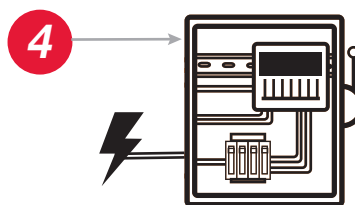


4 ENERGIZE MAIN POWER LINE


SHUT-DOWN

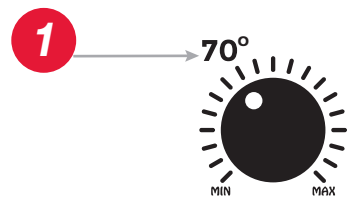

1 RETURN SET-POINT TEMPERATURE

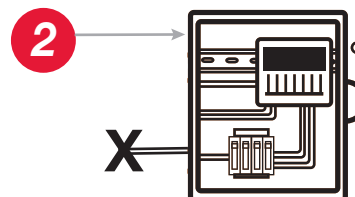

2 TURN OFF MAIN POWER

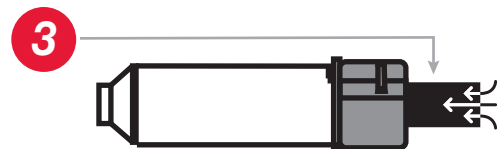

3 CONTINUE AIR FLOW



4 TURN OFF AIR TO SYSTEM

DOWNLOAD
MANUAL

