



INSTALLATION

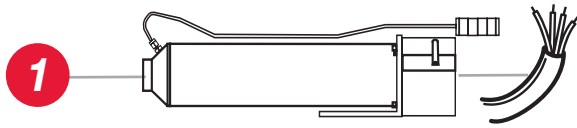


1

MOUNT AND WIRE HEATER

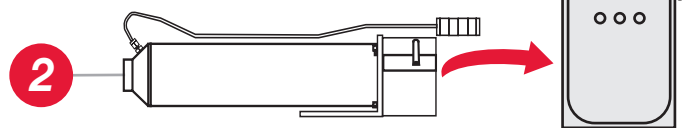

2

WIRE HEATER TO CONTROL (G, H1, H2, H3) and (S1, S2)

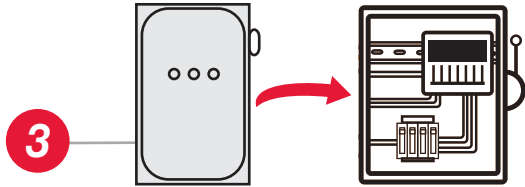

3

WIRE CONTROL TO MAIN POWER (L1, L2, L3, GND)

For detailed instructions use the QR code below to download the product manual



PROPER TORQUE VALVES FOR FITTINGS

WARNING: Avoid Damage to Housing


3/8" NPT (Sensor): 4 ft-lb

3/4" NPT (Power): 25 ft-lb

1-1/4" NPT (Air): 7 ft-lb


(Excessive force will crack housing and void warranty)

START-UP

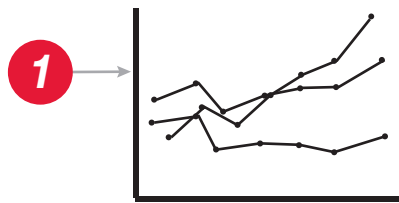


1

REFERENCE PERFORMANCE CURVES

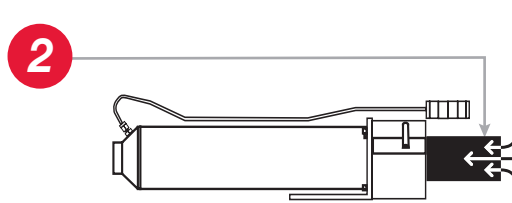


2

CONNECT AIR SOURCE TO HEATER

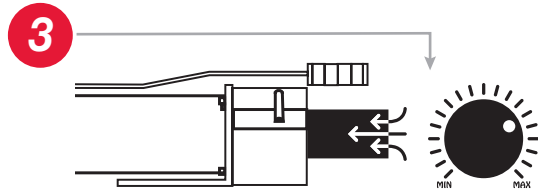

3


TURN ON AIR

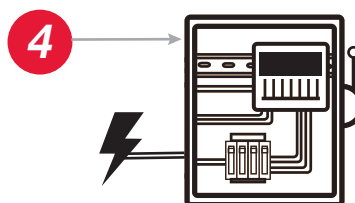

4


ENERGIZE MAIN POWER LINE

SHUT-DOWN

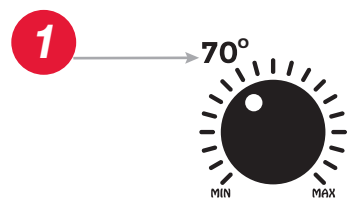


1

RETURN SET-POINT TEMPERATURE TO AMBIENT OR BELOW

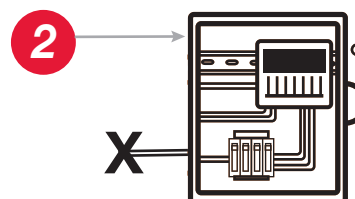


2

TURN OFF MAIN POWER

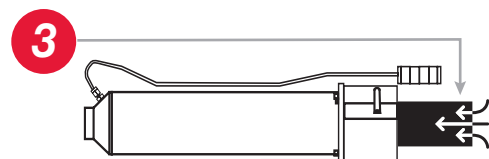

3

CONTINUE AIR FLOW

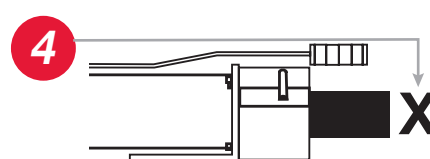

4

TURN OFF AIR TO SYSTEM

DOWNLOAD
MANUAL

