Introducing the TD41 Series (Narrow Space) Melt Pressure Transducers.

SERIES:TD41




FEATURES

- Fluid filled system
- Standard 3.33mV/V
- 6pin Bayonet Connector
- 10" Exposed Capillary
- 18" Flex
- 0.5% Combined Error
- 80% Output Calibration
- Industry Standard Housing
- 750°F (400°C) Rating
- Ranges from 0-500 to 0-20,000psi
- 15-5 Stainless Steel Diaphragm

TD41 OPTIONS

- OUTPUT OPTIONS
 - 4-20mA
 - 0-10VDC
- CONNECTOR OPTIONS 8pin, 6pin- Threaded
- Mercury Free/Oil Fill (660°F)
- No Capillary /Complete Armour

DIMENSIONS

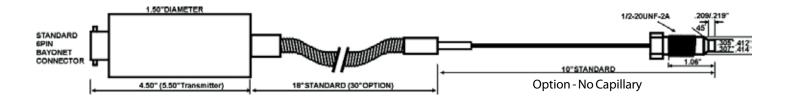

SPECIFICATIONS

Mechanical Ranges

Max Error Repeatability Overload Capability

Mounting Torque

Temperature Effects Maximum Diaphragm Temp

Zero Shift Of Diaphragm

Maximum Housing Temp Zero Shift Of Electronics

Electrical
Measuring Sensor
Supply Voltage
Element Resistance
Zero & Span (Transmitter)
Internal Shunt Calibration
Zero Balance (Transducer)
Oil Fill Temperature Drift

0-500, 750, 1000, 1500, 3000, 5000, 7500, 10,000, 15,000, 20,000psi

+/- 0.5%

+/- 0.2% Of Full Scale

2x Full Scale

150 Inch-lbs MIN 500 Inch-lbs MAX

750° F (400° C) - Mercury Fill

660° F (350° C) – Mercury Free/Oil Fill 15psi / 100° F (38° C) – Mercury Fill

30psi / 100° F (38° C) – Mercury Free/Oil Fill

250° F (121° C) 1% / 100° F (38° C)

Output 3.33 Mv/v (optional 4-20ma and 0-10 vdc) 10 vdc for Mv/v and 16-36 vdc for amplified units

± 1% Of Full Scale

± 15%

 $80\% \pm 0.2\%$ Of Full Scale

± 5% Full Scale

Up to 125 psi @ 250° F (121° C), Up to 250 psi @ 500° F (260° C)

ORDERING

(thermal expansion)

Series Fill M -	Output 3	Pressure 10M	Accuracy 5	Capillary 6	Flex 18	Thread U	Connector 6B	Diaphragm T	Tip Length
TD41 M= Mercury O= Oil	3= 3.33mV/V 4= 4-20mA 1= 0-10VDC	M= PSI x1000 C= PSI x100 5C 7.5C 1M 3M 5M 7.5M 10M 15M 20M	2= 0.25% 5= 0.5%	0= 0" 10= 10"	18=18" 30= 30"	U= 1/2" x 20 M= M18 x 1.5	6B= 6 PIN Bendix 6T= 6 PIN Threaded 8T= 8 PIN Threaded 8C= 8 PIN Threaded (Barber Colman)	T = 15-5 stainless steel	1 = 0.125" tip length 2 = 0.215" tip length

MECHANICAL INSTALLATION


1. MOUNTING HOLE


All holes must be concentric within 0.002" AVAILABLE DRILL KITS: Page 4

2. PROTECTIVE CAP

Leave cap on until installation - FRAGILE tip

- 3. LUBRICATE THREADS with EITHER:
 - 1. NEVERSEEZ by BOSTIK
 - 2. C5A by FELRO
 - 3. MOLYKOTE by DOW CORNING
- 4. CLEAN HOLE OF ALL PLASTIC MATERIALS Any residue can damage tip on installation. AVAILABLE CLEAN KITS: Page 4
- 5. TRANSDUCER HOUSING (Max Temp 160°F) Install in low vibration area. MOUNTING BRACKET: TDMP-MTG-BRACKET

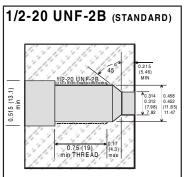

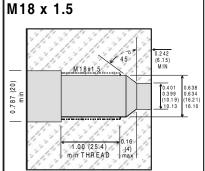



6. MOUNTING TORQUE MIN 150inch-lbs MAX 500inch-lbs Install finger tight then turn 1/4 TURN with wrench

ELECTRICAL INSTALLATION

- 1. WIRING DIAGRAM
 Depending on connector below:
- 2. CABLE+GROUND (26AWG, 6WIRE, SHIELD)
 Shield may have to be connected to ground in a high noise environment. Do not connect to meter.

3. ZERO ADJUSTMENT

To compensate for pressure drift caused by temp changes. At operating temperature with no pressure on transducer, adjust the pressure indicating device to read "0"

4. SPAN ADJUSTMENT

To calibrate readout device to transducer.

Press "CALIBRATE" and adjust reading to read 80% SPAN.

TRANSDUCER - 3.33 mV/V


6 PIN BAYONET






LEAD	COLOR	6 PIN
SIGNAL+	RED	Α
SIGNAL-	BLACK	В
EXCITATION+	WHITE	С
EXCITATION -	GREEN	D
CALIBRATION	BLUE	Е
CALIBRATION	ORANGE	F
1		

6 PIN SCREW

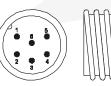

LEAD	COLOR	6 PIN
SIGNAL +	RED	1
SIGNAL -	BLACK	2
EXCITATION -	GREEN	3
EXCITATION +	WHITE	4
CALIBRATION	BLUE	5
CALIBRATION	ORANGE	6

8 PIN SCREW

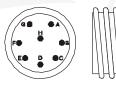

LEAD	COLOR	8 PIN
EXCITATION+	WHITE	A
SIGN AL+	RED	В
EXCITATION-	GREEN	С
SIGN AL-	BLACK	D
CALIBRATION	BLUE	E
CALIBRATION	ORANGE	F
NOT USED		G
NOT USED		Н

8 PIN SCREW (Barber Colman)



LEAD_	COLOR	8 PIN
EXCITATION+	WHITE	Α
SIGN AL+	RED	В
SIGN AL-	BLACK	С
EXCITATION-	GREEN	D
CALIBRATION	BLUE	E
CALIBRATION	ORANGE	F
NOTUSED		G
NOTHSED		H

TRANSDUCER - 3.33 mV/V

6 PIN BAYONET





4-20mA OUTPUT

LEAD	COLOR	6 PIN
SUPPLY/SIG NAL+	RED	Α
SUPPLY/SIGNAL-	BLACK	В
N/A	WHITE	С
N/A	GREEN	D
CALIBRATION	BLUE	E
CALIBRATION	ORANGE	F

VOLTAGE OUTPUT 0-10VDC

LEAD	COLOR	6 PIN
SIGNAL+	RED	Α
SIGNAL-	BLACK	В
EXCITATION+	WHITE	С
EXCITATION-	GREEN	D
CALIBRATION	BLUE	E
CALIBRATION	ORANGE	F

GENERAL OPERATIONAL GUIDES

1. START UP

Before starting the extruder drive, ensure that the extruder is at operational temperature and plastic at tip is molten. A cold start can literally rip off the fragile diaphragm.

2. REMOVAL

Only remove transducer when barrel is at operational temperature and zero pressure.

Always clean hole of all solids before re-installing.

Check hole dimensions with thread gauge of cleaning kit to ensure proper hole. Hole size at tip can reduce over time.

Always remove transducer before cleaning inside barrel with abrasive cleaner or wire brush.

3. CLEANING TIP

Clean tip lightly with a dry cloth while tip is still hot.

Do not use any sharp tools (screwdriver, chisel, knife, wire brush etc.)

TROUBLESHOOTING

1. Indicator Full Scale

2. Indicator Unstable Reading

3. Indicator Reads Only "0"

4. Indicates Wrong Pressure

Check Continuity Of Cables Check Continuity Of Cables

Perform Calibration.

If Doesn't Change - Send Instrument In For Anaysis

Perform Calibration

If Still Incorrect - Send Transducer In For Analysis

HOLE CLEANING KIT I

TDMP-1-CLEANKIT

Kit is used to clean transducer hole before insertion to prevent diaphragm damage.



HOLE CUTTING KIT

TDMP-1-CUTTINGKIT

All the Drills, Reamers and Taps required to drill a proper hole for standard transducers (1/2-20UNF).

